

SMF Replacement Cartridge Changing Instructions



Your SMF filtration system may look different than this. These cartridge changing instructions are generic, and apply to all SMF filtration systems.



Figure #1

Step #1

Shut off inlet valve **1**. Push “Red” pressure relief button **2** located at left end of SMF filter system to relieve pressure until no more water comes out. Grasp filter cartridge, turn counter-clockwise 1/8 turn (when viewed from bottom) and pull downward about 1 1/2” to remove the filter cartridge. (See Figure #1) Properly dispose of old cartridge.

Step #2

Remove and discard the “Red” sanitary cap from the top of the new cartridge. Be sure to apply sufficient lubrication (supplied) to the O-Rings. Align ear on cartridge with notch in filter head and push upwards to insert. Be sure to push cartridge all the way in! Turn cartridge clockwise (when viewed from bottom), 1/8 turn, until a definite stop is felt and cartridge is seated. (See Figure #2) Hand tight is sufficient. Repeat above steps for systems with multiple cartridges. Turn on inlet valve. **1** Flush for one minute.

Lubricate O-Rings



Figure #2

It is recommended that the cartridge(s) be changed at least yearly. See system backplate label for proper replacement cartridge part number.